



AS 1200


LED Akku-Sprühgebläse
 LED Battery spray blower
 LED pulvérisateur souffleur à batterie
 LED irroratrice con soffiatore a batteria

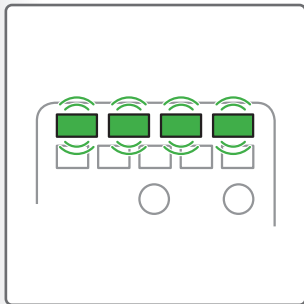


Kein Turbo + Ladezustand (100%)
 No turbo + Charge state (100%)
Pas de turbo + Etat de charge (100%)
 Nessun turbo + Stato di carica (100%)

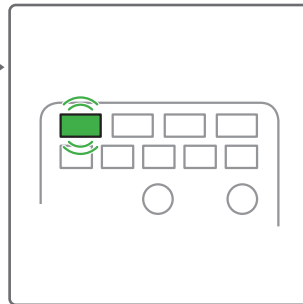


Kein Turbo + Ladezustand (10%)
 No turbo + Charge state (10%)
Pas de turbo + Etat de charge (10%)
 Nessun turbo + Stato di carica (10%)

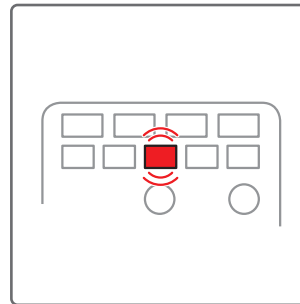


Standby
 Standby
Mode veille
 Standby

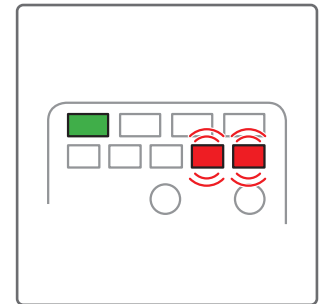


Akku leer
 Battery empty
Batterie vide
 Batteria scarica

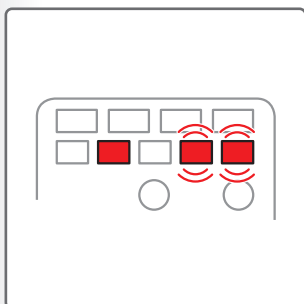


Überhitzung
 Overheating
Surchauffe
 Surriscaldamento

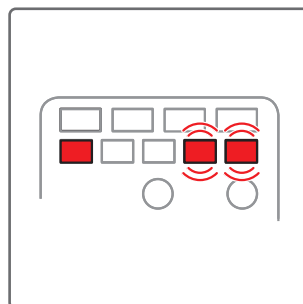


Elektronikfehler
 Electronic fault
Défaut électronique
 Guasto elettrico

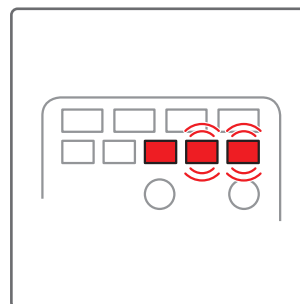


Motorfehler
 Motor fault
Défaut moteur
 Guasto al motore

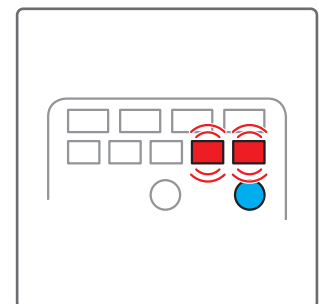


Ventilstörung
 Valve fault
Défaut soupape
 Interferenza con la valvola

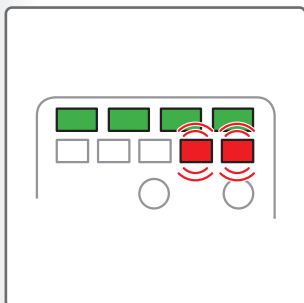


Überspannung
 Overvoltage
Surtension
 Sovratensione

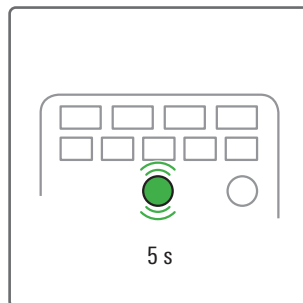

Gesperrt durch Zusatzanwendung
 Blocked by additional application
Verrouillé par une application supplémentaire
 Bloccato da un'applicazione aggiuntiva

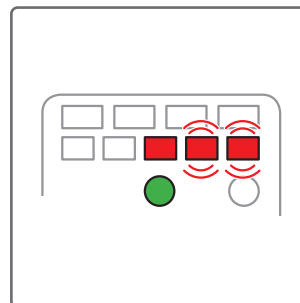

Fehler Zusatzanwendung
 Error additional application
Erreur application supplémentaire
 Errore nell'applicazione aggiuntiva

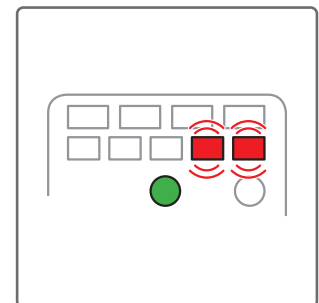

Überstrom Zubehörschnittstelle
 Overcurrent at accessory interface
Surintensité interface accessoire
 Sovracorrente interfaccia accessori