





Root Watering System (RWS) Sock Installation Instructions

The Root Watering System (RWS) Sock is designed to fit on the outside of any standard RWS unit. The RWS Sock will deter fine soil from infiltrating into the RWS basket weave canister.

Installation Steps

1. The Root Watering System (RWS) Sock has a pre-cut opening to accommodate the (optional) swing assembly. This pre-cut opening is located 3.6 inches from the **top** of the Sock. Locate this opening now.
2. If you have cut the Root Watering System unit to shorten the overall length, you will also need to shorten the Sock to match. Make sure you are measuring and cutting the Sock from the **bottom**, not the top.
3. With the (optional) swing assembly pointed downwards, slip the Sock over the bottom of the RWS unit and pull upwards. Pull the swing assembly through the pre-cut opening.
4. The RWS unit with the Sock is now ready for installation as described in the RWS instruction sheet.

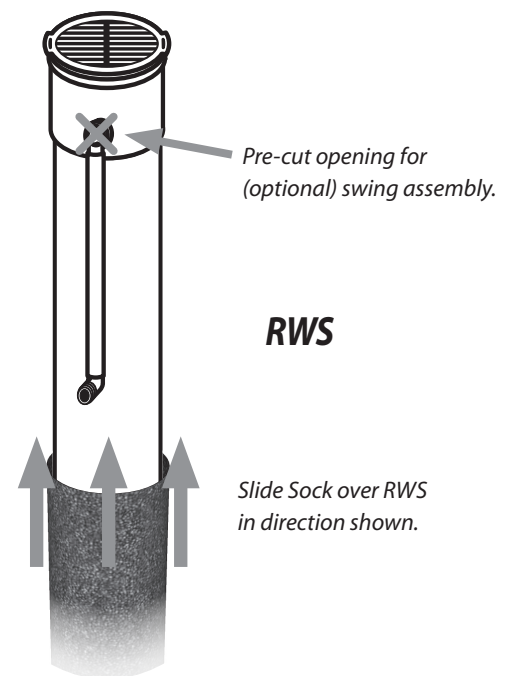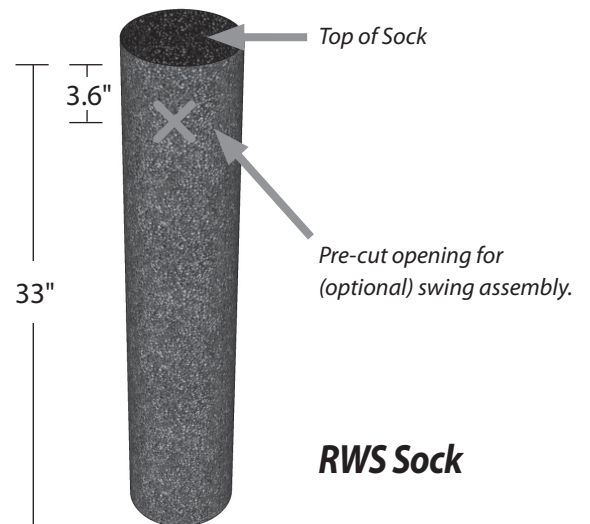

Rain Bird Corporation
6991 E. Southpoint Road
Tucson, AZ 85756
Phone: (520) 741-6100
Fax: (520) 741-6522

Rain Bird Corporation
970 West Sierra Madre Avenue
Azusa, CA 91702
Phone: (626) 812-3400
Fax: (626) 812-3411

Rain Bird International, Inc.
1000 West Sierra Madre Ave.
Azusa, CA 91702
Phone: (626) 963-9311
Fax: (626) 852-7343

Rain Bird Technical Services
(800) RAINBIRD (1-800-724-6247) (U.S. and Canada)

Specification Hotline
800-458-3005 (U.S. and Canada)

The Intelligent Use of Water™
www.rainbird.com